

PowerWash Deluxe

USER'S GUIDE
1694 SERIES 220-240V



3 Safety Instructions

4 Product View

5 Assembly

5-12 Operation

13-15 Maintenance and Care

16-17 Troubleshooting

18 Consumer Services

19 Replacement Parts

20 Warranty



 
Thank you for buying a BISSELL PowerWash Deluxe deep cleaner

We're glad you purchased a BISSELL PowerWash Deluxe deep cleaner. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL PowerWash Deluxe is well made, and we back it with a limited two year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL PowerWash Deluxe.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
President and Chief Executive Officer

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR UPRIGHT DEEP CLEANER.

Always connect to a properly Earthed outlet. Unplug from outlet when not in use and before conducting maintenance or troubleshooting.

WARNING: To reduce the risk of fire, electric shock, or injury:

- Use indoors only
- Do not immerse
- Use only on surfaces moistened by cleaning process
- Do not leave machine when it is plugged in
- Do not service machine when it is plugged in
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard
- Do not use machine if it has been dropped, damaged, left outdoors or dropped into water
- Do not expose to rain, store indoors
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces
- Do not carry the appliance while in use
- Do not unplug by pulling on cord; unplug by grasping plug not the cord
- Do not handle plug or appliance with wet hands
- Do not put any object into appliance openings, use with blocked opening or restrict air flow
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts
- Do not pick up hot or burning objects
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapours
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours

- Remove plug from electrical outlet before cleaning or maintaining the appliance
- Not intended for use by young children or infirm persons without supervision
- Young children should be supervised to ensure that they do not play with the appliance
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.)
- Do not modify the Earthed plug
- Do not allow to be used as a toy
- Do not use for any purpose other than described in this User's Guide
- Use only manufacturer's recommended attachments
- Use only cleaning products formulated by BISSELL for use in this appliance to prevent internal component damage
- Keep openings free of dust, lint, hair, etc.
- Keep appliance on a level surface
- Turn off all controls before unplugging
- Be extra careful when cleaning stairs
- Pay close attention when working around children

SAVE THESE INSTRUCTIONS.


THIS MODEL IS FOR HOUSEHOLD USE ONLY.

 **WARNING:** This appliance must be Earthed.

IMPORTANT FOR OPERATION ON A 220-240 VOLT A.C. 50/60 Hz POWER SUPPLY ONLY.

If your appliance is fitted with a nonrewireable BS 1363 plug it must not be used unless a 13 amp (ASTA approved to BS 1362) fuse is fitted in the carrier contained in the plug. Spares may be obtained from your BISSELL supplier. If for any reason the plug is cut off, it must be disposed of, as it is an electric shock hazard should it be inserted into a 13 amp socket.

Product view

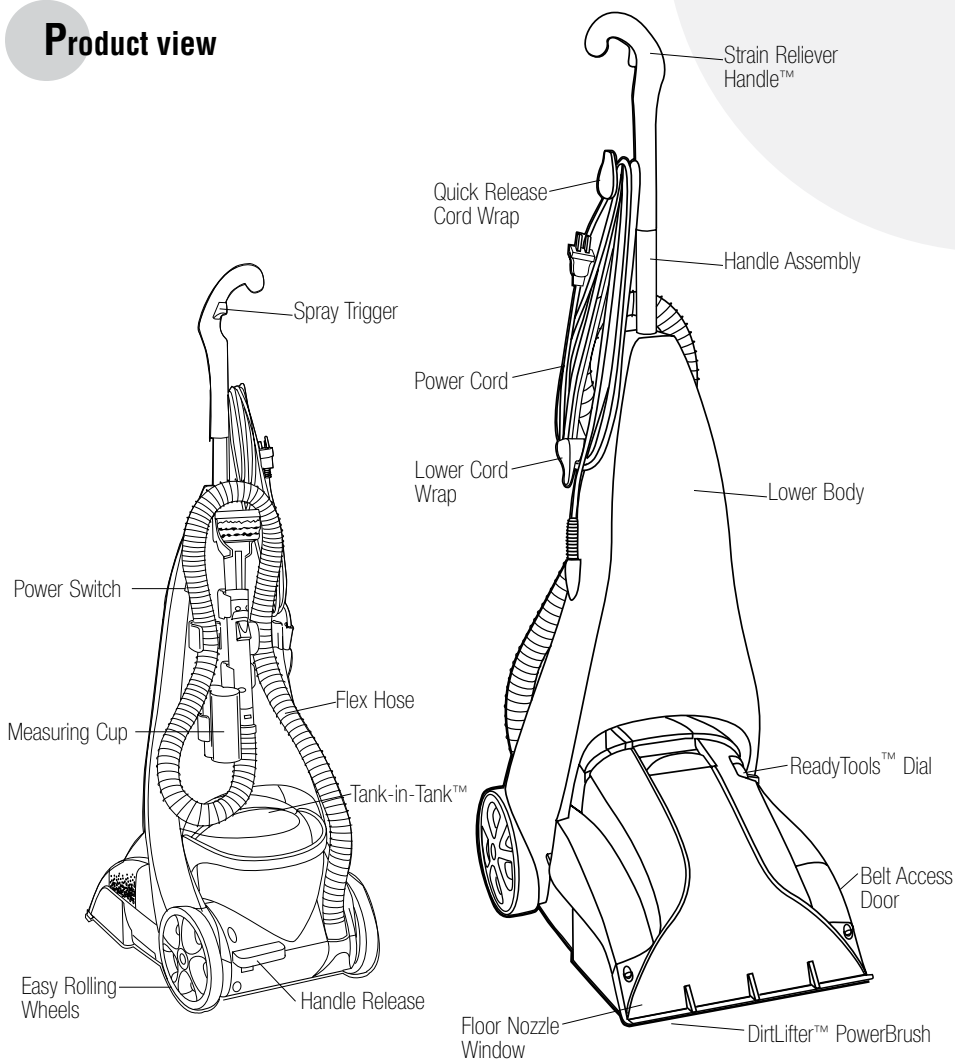

BISSELL Formulas:

These items are available for purchase. To order replacement parts, additional tools or formulas, please refer to page 19.



1.42 L
Fibre Cleansing
Formula™ with
Scotchgard™
protector



1.42 L
Multi-Allergen
Removal™ Formula
with Scotchgard™
protector



1.42 L
Pet Odor and Soil
Removal™ Formula
with Scotchgard™
protector



1.42 L
Natural Orange
Extract Formula with
Scotchgard™ protector



1.42 L
Lavender Essence
Formula with
Scotchgard™
protector



32 oz.
Hard Floor
Solutions™
Formula

How to put it together

This user's guide has been designed to help you get the most satisfaction from your BISSELL PowerWash Deluxe deep cleaner. You'll find assembly and operating instructions, safety precautions, as well as maintenance and troubleshooting instructions. Please read this user's guide thoroughly before assembling your deep cleaner.

Pay particular attention to the product diagram, assembly instructions, and part names. Locate and organize all parts before assembly. Familiarize yourself with the parts and where they go. Following this user's guide will greatly enhance your ability to get the most performance from your PowerWash Deluxe deep cleaner for many years.



WARNING:

Do not plug in your cleaner until you have completely assembled it per the following instructions and are familiar with all instructions and operating procedures.


Assembly

Your PowerWash Deluxe comes in 2, easy to assemble components.



Handle Assembly Lower Body

The only tool you will need to assemble your cleaner is a Phillips head  screwdriver.

Refer to Assembly Diagram on page 4.

1. Slide the handle assembly (with attached Quick Release Cord Wrap™) down into the lower body until it will go no further.
2. Secure the handle by placing one (1) Phillips head  screw (supplied) through the screw opening in the lower body and into the rear of the handle assembly. Tighten with screwdriver until secure.


PowerWash Deluxe assembly is now complete.

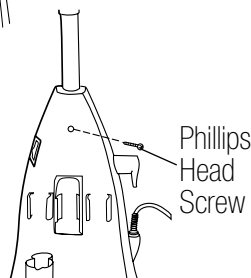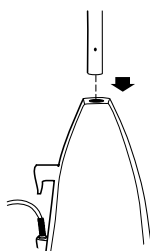

Operation

Power

The power switch controls power to the machine.

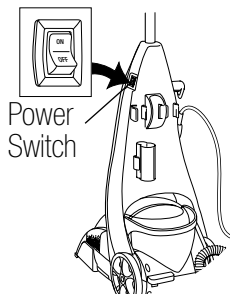

Operation

DirtLifter™ PowerBrush (on select models)

The powered brush roll at the floor nozzle is designed to enhance cleaning performance. The bristle pattern lifts out the deep down dirt while gently grooming carpet fibers. The floating suspension self-adjusts to all carpet heights. When the machine handle is in the fully upright position, CarpetSaver™ automatically raises the brush off the carpet and protects your carpet if you leave the power switch ON.

Measuring cup

Your PowerWash Deluxe is equipped with a measuring cup for adding the proper amount of cleaning formula to the Tank-in-Tank™. Before using the machine, simply fill the measuring cup to the fill line with any BISSELL advanced deep cleaning formula for full size machines. Pour the formula into the Tank-in-Tank as shown. For convenience, the measuring cup stores on the back of the unit.

Fill Tank-in-Tank™

Our Tank-in-Tank system is designed with a bladder inside to hold clean water. As you clean, the bladder will empty. Dirty water collects in the tank outside the bladder.

NOTE: Make sure to add formula to the tank before filling it with water.


1. Depress the handle release pedal to lay the machine handle down, out of the way.
2. Lift the Tank-in-Tank handle. The handle locks the lid in place. Carry the Tank-in-Tank like a bucket to fill at the sink.
3. Set the tank down and rotate the handle forward to unlatch the lid. Lift off and set the lid aside.
4. Using the measuring cup, pour BISSELL deep cleaning formula into the mouth of the bladder. **Do not boil or microwave water as it can destroy the bladder.**

NOTE: Fill the bladder with water only. Fill slowly to reduce sudsing.

5. Fill to the bottom of the neck with hand hot tap water.
6. Replace the tank lid, matching the lid and tank edges. Rotate the handle to carrying position. Replace tank in machine base, seating firmly in place. Rotate handle back down to latched position.

WARNING:

To reduce the risk of fire, use only BISSELL advanced deep cleaning formula for full size machines in your PowerWash Deluxe. Use of cleaning formulas that contain lemon or pine oil may damage this appliance and void the warranty. Chemical spot cleaners or solvent-based soil removers should not be used. These products may react with the plastic materials used in your PowerWash Deluxe causing cracking or pitting.

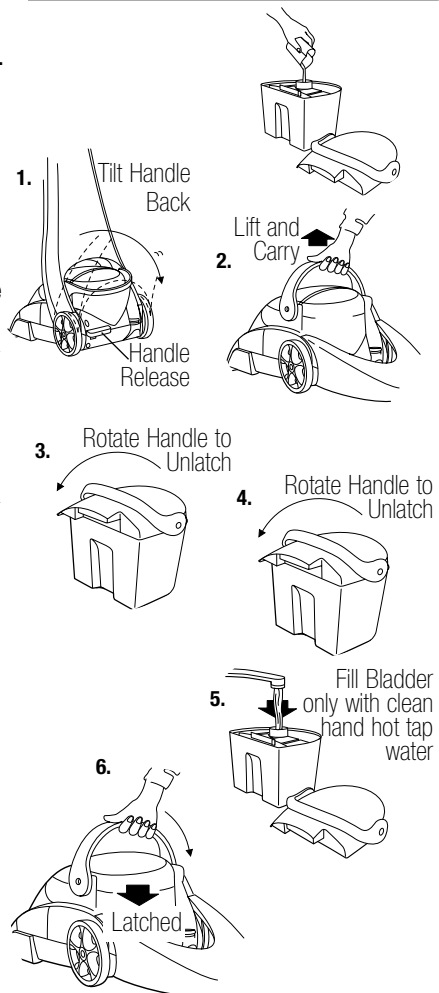

Operation




Emptying the Tank-in-Tank

NOTE: Remove the Tank-in-Tank, following steps 1 and 2 on page 6.

1. Carry the Tank-in-Tank, like a bucket, to the sink. Remove tank lid. Pour out dirty water.
2. After each use, remove and rinse the lint screen located on the tank lid.
 - a. Remove tank lid, follow step 3 on page 6.
 - b. Remove lint screen and rinse under faucet to remove any debris.
 - c. Insert lint screen back in tank lid. The screen will click into place.
 - d. Replace tank lid.
3. Refill with cleaning formula and clean hand hot tap water—follow steps 4 and 5 on page 6.

Note: When the cleaning job is complete, rinse out the Tank-in-Tank by running clean water between the bladder and the tank.


4. Return the Tank-in-Tank to the machine, follow step 6 on page 6.
5. Refer to the Maintenance care section on page 13 for final cleanup.

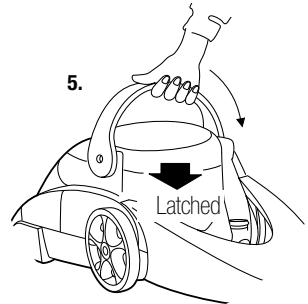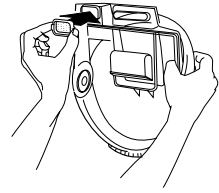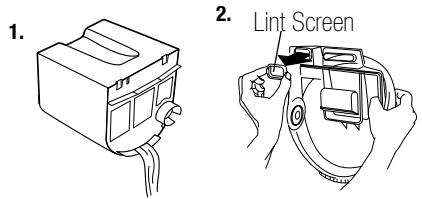

ReadyTools™ dial

This provides floor or upholstery cleaning with the turn of a dial. For carpet/floor cleaning make sure the dial is set to FLOOR CLEANING. For upholstery or fabric cleaning, select your cleaning tool, attach it to the flex hose, and the PowerWash Deluxe is ready to clean upholstery, fabrics and more*.

*Set the ReadyTools dial to FLOOR CLEANING when cleaning carpets or set it to TOOLS when using the flex hose attachments.

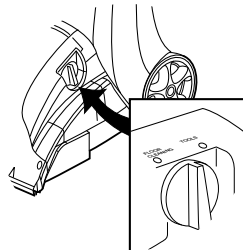

Tip:


A special red float device in the tank will cause the cleaner to stop removing solution from the carpet. The motor sound will rise in pitch to let you know the dirty water tank is full.

Operation

Before you clean carpets

1. Plan activities to give carpet time to dry.
2. Remove easily moved furniture from the room (chairs, lamps, coffee tables, etc.).
3. Vacuum thoroughly to pick up loose debris and pet hair before using the PowerWash Deluxe.
4. Plan your cleaning route to leave an exit path. It is best to begin cleaning in the corner farthest from your exit.

Note: You may notice hair and debris deposits on carpet that were loosened by brushing action (especially with newer carpets that have never been deep cleaned before). This debris should be picked up by hand and thrown away. Debris that deposits in the brush belt area should be cleaned out to keep belts running free.

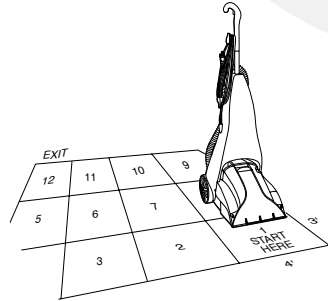

PreTreating (optional)

Pre treating is recommended to improve cleaning effectiveness for heavily soiled carpet in high traffic areas, such as hallways and stairs.

1. Set the ReadyTools dial to **TOOLS**.
2. Plug the PowerWash Deluxe into a proper outlet and turn the power switch ON.
3. While pressing the spray trigger, slowly make several passes over the area to be cleaned. **Caution: Do not overwet.**
4. Turn the power switch OFF and let the BISSELL advanced deep cleaning formula dissolve the tough soil for 1 to 2 minutes.

Note: Reset the ReadyTools dial to **FLOOR CLEANING** before continuing.

Tip:

Deep cleaning carpeting and upholstery regularly can reduce dust and allergens in your home.

Operation

Normal cleaning

1. Plug the PowerWash Deluxe into a proper outlet and turn the power switch ON.
2. While pressing the spray trigger, make one slow forward and backward wet pass. Let the BISSELL advanced deep cleaning formula and DirtLifter PowerBrush do the work for you. **Caution: Do not overwet.**
3. Release the spray trigger and make one slow forward and back pass over the same area to remove any residual dirty water.
4. Repeat cleaning passes without pressing the spray trigger until you can't see any more water being suctioned up.
5. When cleaning job is complete, refer to the Maintenance and care section on pages 13-15 for machine cleanup and storage instructions.

Cleaning fluid

Keep plenty of genuine BISSELL advanced deep cleaning formula for full size machines on hand so you can clean and protect whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas.

Tip:

Thorough vacuuming before deep cleaning will prevent early clogging of the lint trap.

WARNING:

To reduce the risk of fire and electric Shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner. Non-BISSELL cleaning solutions may harm the machine and void the warranty.



1.42 L
Fiber Cleansing
Formula™ with
Scotchgard™
protector
item # 710E



1.42 L
Multi-Allergen
Removal™ Formula
with Scotchgard™
protector
item # 720E



1.42 L
Pet Odor and Soil
Removal™ Formula
with Scotchgard™
protector
item # 730E



1.42 L
Natural Orange
Extract Formula™ with
Scotchgard™ protector
item # 740E



1.42 L
Lavender Essence
Formula™ with
Scotchgard™ protector
item # 750E

Operation




Cleaning bare floors

The bare floor tool provides effective cleaning for linoleum, vinyl, and tile floors. **Caution: Do not use on hardwood floors**

1. Use only BISSELL Hard Floor Solutions.
2. Vacuum or sweep thoroughly to pick up loose debris and pet hair
3. Remove easily moved furniture from the room (chairs, tables, etc.)
4. Plan your cleaning route to leave an exit path.
5. Plan activities to allow 30 minutes for the floor to dry completely.

Attach the bare floor tool

1. Step on the handle release to lay the machine handle down.
2. Remove the Tank-in-Tank from the machine base.
3. Lift the machine base to expose the underside of the nozzle.
4. Attach bare floor tool to nozzle with long tab to the right side (ReadyTools side) of the nozzle.
5. First attach left side (short tab) catching tab over nozzle edge.
6. Gently bend long tab (right side) outward to easily snap over edge of clear nozzle on left.

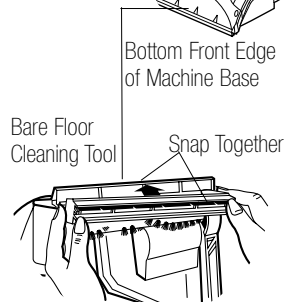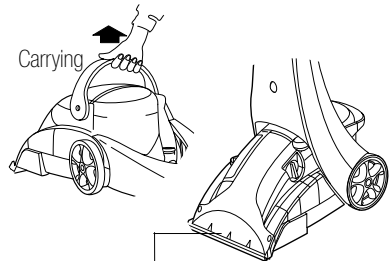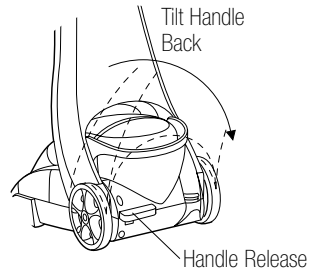

Operation

Machine preparation

1. Set up machine following instructions on pages 6-9. Be sure to thoroughly rinse out any remaining BISSELL advanced deep cleaning formula from the Tank-in-Tank to prevent slippery linoleum, vinyl, and tile floors. Use BISSELL Hard Floor Solution in the Tank-in-Tank.
2. Check ReadyTools dial - it should be set on **FLOOR CLEANING**.
3. Plug into a proper outlet and turn power switch ON.

Bare floor cleaning technique



1. Slowly move the machine nozzle with bare floor tool forward and back over soiled surface one time while pressing the spray trigger.
Caution: Do not over wet.
2. Repeat the motion without pressing the spray trigger, using the bare floor tool to squeegee and suction up the dirty water.
3. Repeat steps 1 and 2 backing along the exit path.
4. Allow about 30 minutes for the floor to dry completely.
5. When the cleaning job is complete refer to the Maintenance and care section on page 13-15 for machine cleanup and storage instructions
6. To remove bare floor tool gently bend long tab (right side) outward and pull tool down away from nozzle. Rinse thoroughly, dry and store.

Operation

Cleaning upholstery and small areas

Important—Check upholstery tags.

1. Check manufacturer's tag before cleaning. A "W" or "WS" on the tag means you can use your PowerWash Deluxe. If the tag is coded with an "X" or "S" (with a diagonal strike through), or says "Dry Clean Only," do not proceed. Do not use your PowerWash Deluxe on velvet, silk, 100% cotton upholstery, vinyl or leather. If manufacturer's tag is missing or not coded, check with your furniture dealer.
2. Check for colourfastness in an inconspicuous place.
3. If possible, check upholstery stuffing. Coloured stuffing may bleed through fabric when wet.
4. Plan activities to give upholstery time to dry.
5. Vacuum thoroughly to pick up loose debris and pet hair. Use a vacuum with a brush attachment and a crevice tool to clean in fabric folds and tufts.

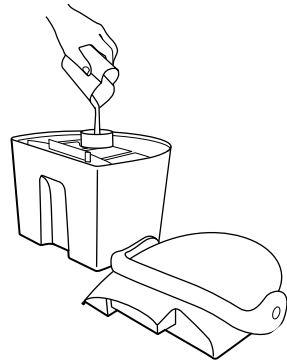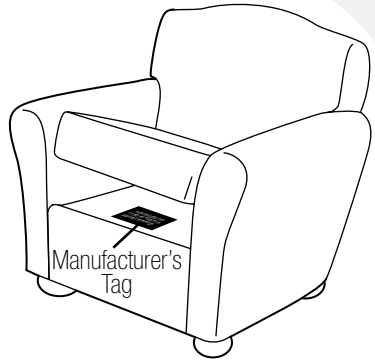

Machine preparation

1. Set up the machine following instructions on pages 6-9.
2. Using the measuring cup provided, pour any BISSELL advanced deep cleaning formula into the Tank-in-Tank.
3. Set the ReadyTools dial to **TOOLS**.

Tip:

Deep cleaning carpeting and upholstery regularly can reduce dust and allergens in your home.


Maintenance and care

1. Turn power switch OFF.
2. Unplug power cord from outlet and coil cord around Quick Release Cord Wrap.
3. Remove and rinse tools in clean, running water, let dry and replace in tool caddy.
4. Coil flex hose through storage brackets.
5. Remove Tank-in-Tank. Dispose of dirty water. See the Operation section, page 7.
6. Rinse out Tank-in-Tank, clean the lint screen and reseal the tank onto the machine.
7. Wipe all exterior surfaces with a soft cloth.
8. Store cleaner upright in a protected, dry area.
9. When carpet is dry, vacuum again to remove hair and fuzz that the PowerWash Deluxe may have loosened.



WARNING:

To reduce the risk of fire, electric shock, or injury, unplug machine from outlet before servicing.

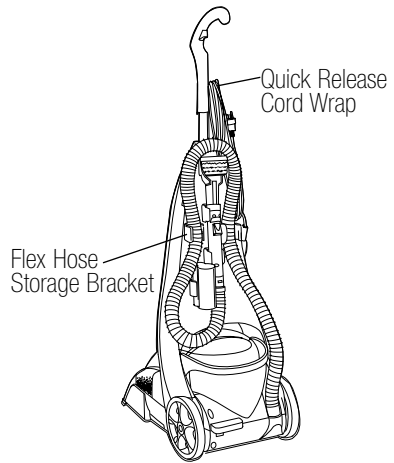









CAUTION:

PowerWash Deluxe uses water and must not be stored where there is danger of freezing. Freezing will damage internal components and void the warranty.

Maintenance and care

Pump & brush belt replacement

1. Turn the power switch OFF and unplug from wall outlet.
2. Step on handle release pedal and recline handle on floor.
3. Remove the Tank-in-Tank and set aside.
4. Remove the belt access door located near the ReadyTools Dial. Insert a flathead screwdriver into the slot nearest the handle to gently pry off the belt access door.
5. Turn the machine onto its side so the belt access area is facing upward.
6. On the bottom of the machine, near the belt access area, is a red retainer plate that holds the black brush arm and brush in place. Using a Phillips head screwdriver remove the screw that holds the red retainer plate in place. Set red retainer plate and Phillips head screw aside.
7. Remove the black brush arm that holds the brush in place. Set the black brush arm aside.
8. Remove the "toothed" brush belt from the brush then from the red pump pulley. Set the "toothed" brush belt and brush aside.
9. Locate and remove the broken pump belt.

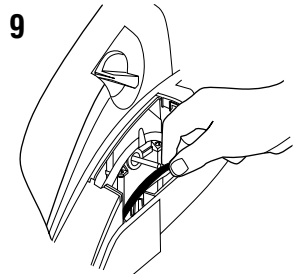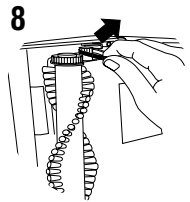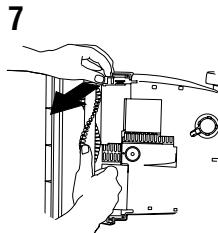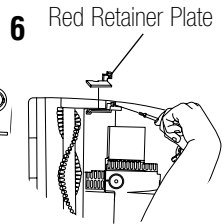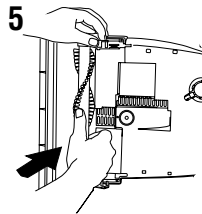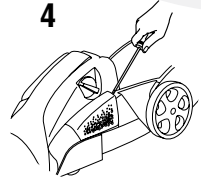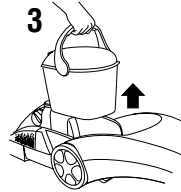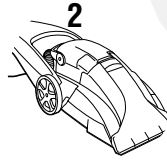

WARNING:

To reduce the risk of fire, electric shock, or injury, unplug machine from outlet before servicing.






Maintenance and care

Install the replacement pump belt

1. With the unit still on its side, loop one end of the replacement pump belt around the red pump pulley and the other end around the silver motor shaft. Do not twist the replacement pump belt.
2. Re-install the "toothed" brush belt first onto the red pump pulley and then onto the "toothed" end of the brush.
3. Re-install the brush into the base of the unit.
4. Place the black brush arm onto the brush and slide black brush arm into original position.
5. Re-install the red retainer plate and Phillips head screw.
6. Using your finger, gently spin the replacement pump belt on the silver motor shaft. If assembled correctly, the replacement pump belt should rotate freely around the silver motor shaft and drive pulley without obstruction. The brush should also rotate freely when the silver motor shaft is turned.
7. Turn the machine right side up. Replace the Tank-in-Tank and belt access door.

Assembly is now complete.

If you have any questions, or if you have any trouble installing your replacement pump & brush belt, please call BISSELL Consumer Services as indicated on page 18. Or visit the BISSELL website: www.bissell.com

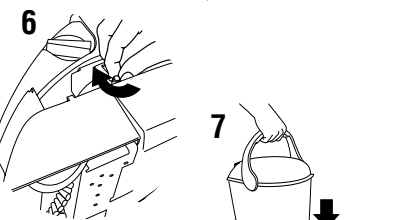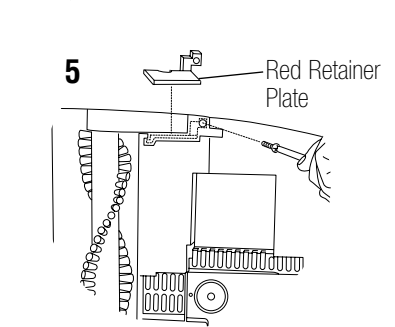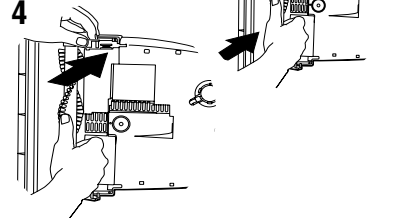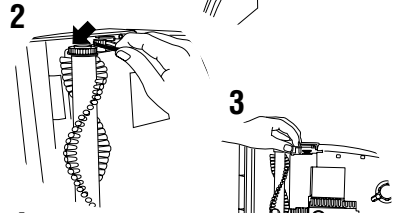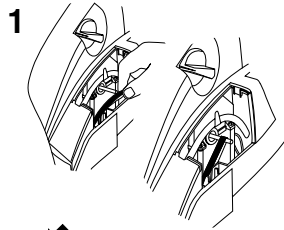


Troubleshooting

Reduced spray or no spray.

Possible causes

1. Bladder may be empty.
2. The lint screen may be clogged.
3. Tank-in Tank may not be seated properly.
4. Pump may have lost prime.
5. The pump belt may be broken.

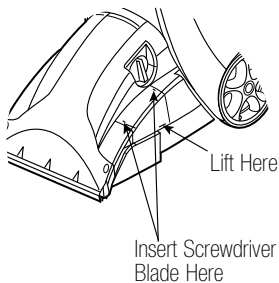

WARNING:

To reduce the risk of fire, electric shock, or injury, unplug machine from outlet before servicing.

Remedies

1. Turn switch power off; refill bladder with clean hand hot tap water.
2. Clean out lint screen.
3. Turn power switch OFF; remove tank and reseal tank.
4. Turn power switch OFF; after 1 minute turn ON and depress spray trigger.

Turn power Switch OFF and unplug machine from the outlet. To check if a pump belt has broken, you will need a flat head screwdriver. Insert the blade end into the lower slot of the belt access door to release the lower snap. If necessary, insert the blade end into the upper slot to release the upper snap. Examine the belt for breakage. You should be able to see the pump belt looped around the motor shaft. If it is broken or missing, please refer to Replacement Parts on page 19 before calling BISSELL Consumer Services. Complete installation instructions will accompany the replacement belt.


Troubleshooting

DirtLifter PowerBrush does not turn.

Possible causes

1. The brush belt or pump belt may be broken.

Remedies

1. Turn power switch OFF and unplug machine from the outlet. To check if a brush or pump belt has broken, you will need a flat head  screwdriver. Insert the blade end into the lower slot of the belt access door to release the lower snap. If necessary, insert the blade end into the upper slot to release the upper snap. Examine the belt for breakage. If broken refer to pages 14-15

PowerWash Deluxe is not picking up solution and water

Possible causes

1. ReadyTools Dial may be at the wrong setting for the cleaning job.
3. Nozzle window may not be properly attached.
3. Tank-in-Tank lid is not properly installed.
4. Tank-in-Tank is not properly seated.
5. Poor tool position (hand held attachments only).
6. Tank-in-Tank has picked up maximum dirty water.

Remedies

1. Set ReadyTools dial to either Tools or Floor Cleaning.
2. Make sure the two tabs on the back of the floor nozzle window are inserted through the mating slots in the main housing. Re-install if necessary.
3. Re-install lid; refer to the Operation section, page 6.
4. Tank-in-Tank must be firmly seated to function. Remove and reseal Tank-in-Tank.
5. Adjust angle; apply more downward pressure.
6. Empty Tank-in-Tank and refill, refer to the Operation section, page 7.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

Please do not return this product to the store.

BISSELL Consumer Services

If your BISSELL product should require service:

In the UK, Australia or New Zealand, call BISSELL Consumer Services at the numbers below and we will give you the location of a BISSELL Authorized Service Center in your area. For all other countries, contact your local in country distributor for questions, service, or repair.

If you have questions about your warranty or need replacement parts please contact the numbers below.

For UK inquiries:

Monday - Thursday 9 am — 5 pm
Friday 9 am — 4 pm

BISSELL Homecare (Overseas) Inc.

The Boat Yard
105 Straight Road
Old Windsor
Berkshire, SL4 2SE
United Kingdom
Telephone: 0870-225-0109

For New Zealand inquiries:

Monday - Friday 9 am — 5 pm

Parex Industries Ltd.

103 Central Park Drive
Henderson
Auckland
New Zealand
Telephone: 0800-247-735

For Australian inquiries:

Monday - Friday 9 am — 5 pm

BISSELL AUSTRALIA PTY LIMITED

Unit 35
15 Ricketts Road
Mount Waverley, Victoria 3149
Australia
Telephone: 1-800-811-183

For all other inquiries:

Monday - Friday 8 am — 4 pm

BISSELL Homecare, Inc.

PO Box 1888
Grand Rapids, MI 49501 USA
Telephone: 01-616-453-4451
Fax: 01-616-453-1383

Or visit the BISSELL website - www.bissell.com

When contacting BISSELL, have model number of unit available.

Please record your Model Number: _____

Please record your Purchase Date: _____

Note: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim. See Warranty on page 20 for details.


Please do not return this product to the store.



Replacement parts

Item	Part No.	Part Name
1	214-4025	Handle Assembly
2	215-9155	Tough Stain Brush
3	015-9043	Tank Assembly Complete
4	015-4439	Tank Lid Assembly
5	015-9041	Tank Bottom
6	213-0213	Baffle with Red Float
7	214-9870	Floor Nozzle Window
8	210-9213	4" Upholstery Tool
9	214-9131	Bare Floor Tool
10	210-1197	Turbo Brush
11	210-4052	Window Gasket
12	215-0628	Replacement Pump Belt (with instructions)
13	015-0621	Replacement Brush Belt (with instructions)
14	015-3500	Lint Screen
15	213-3010	Measuring Cup
16	710E	1.42 L Fiber Cleansing Formula™ with Scotchgard™ protector
17	720E	1.42 L Multi-Allergen Removal™ Formula with Scotchgard™ protector
18	730E	1.42 L Pet Odor and Soil Removal™ Formula with Scotchgard™ protector
19	740E	1.42 L Natural Orange Extract Formula™ with Scotchgard™ Protector
20	750E	1.42 L Lavender Essence Formula™ with Scotchgard™ protector
21	0484	32 oz. Hard Floor Solutions™

***Not all parts are included with every model.**

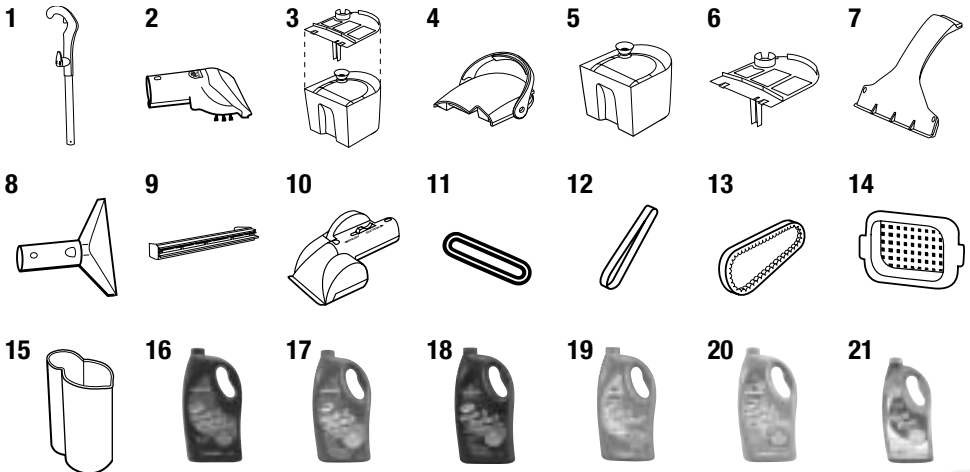

Warranty - BISSELL PowerWash Deluxe

This warranty gives you specific legal rights, and you may also have other rights which may vary from country to country. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Services by telephone, or regular post as described below, or contact your local in country distributor.

Limited Two Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, BISSELL Homecare, Inc., will replace (with new or remanufactured components), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for two years any defective or malfunctioning part do to manufacturers defect.

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, or use not in accordance with the User's Guide is not covered.

For UK inquiries:

Monday - Thursday 9 am — 5 pm
Friday 9 am — 4 pm

BISSELL Homecare (Overseas) Inc.

The Boat Yard
105 Straight Road
Old Windsor
Berkshire, SL4 2SE
United Kingdom
Telephone: 0870-225-0109

For Australian inquiries:

Monday - Friday 9 am — 5 pm

BISSELL AUSTRALIA PTY LIMITED

Unit 35
15 Ricketts Road
Mount Waverley, Victoria 3149
Australia
Telephone: 1-800-811-183

For New Zealand inquiries:

Monday - Friday 9 am — 5 pm

Parex Industries Ltd.

103 Central Park Drive
Henderson
Auckland
New Zealand
Telephone: 0800-247-735

For all other inquiries:

Monday - Friday 8 am — 4 pm

BISSELL Homecare, Inc.

PO Box 1888
Grand Rapids, MI 49501 USA
Telephone: 01-616-453-4451
Fax: 01-616-453-1383

BISSELL HOMECARE INC. IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE TWO YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.



©2007 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 120-4013
Rev 10/07
Visit our website at:
www.bissell.com

Scotchgard is a trademark of 3M

